

*Sun
Spritz*



OPERATING MANUAL

OPERATING MANUAL

TABLE OF CONTENTS

The Concept	2
Sun Spritz™ Facts	2-3
The Client Consultation	4
The Client Consultation Check List	5
The Treatment Cycle	6
Frequently Asked Questions	7
The SS Booth and T-Max Control Panel	8
Operation of the T-Max Control Panel	9
Sun Spritz™ Booth Daily Checks	10
Emergency and First Aid Precautions	11
Installation	12
Installation	13
Enhanced Sun Spritz™ Diagrams	14
Enhanced Sun Spritz™ Diagrams	15
Enhanced Sun Spritz™ Diagrams	16
Press Release	17

OPERATING MANUAL

The Concept

The concept of the Sun Spritz™ was evolutionary - How could a popular treatment be made less time consuming for the client and less laborious for the operator. The obvious answer was to use a booth for the client's privacy and high pressure valve spray system for speed of application. What started out as evolutionary became revolutionary when the Sun Spritz™ was developed.

Sun Spritz™ Facts

Why it is the Best?

- Sun Spritz™ new booth will give the client a rich golden tan in just seconds.
- With just the touch of a button, the client is misted with the highest quality self tanning solution.
- The Sun Spritz™ delivers DHA, bronzers, nourishing moisturisers and Vitamins A, E and C to give the skin a smooth healthy glow.
- Your clients will look and feel great in just seconds with the new Sun Spritz™ technology.

Who is it for?

- Everyone, but especially ideal for hard to tan skin types. The 100% UV-Free process gives a beautiful tan that lasts for 5 to 7 days. The first application will produce a light to medium brown tan. A richer darker color can be obtained by simply repeating the process until the desired results have been achieved. Tanning sessions should be spaced at least 24 hrs apart.

Sun Spritz™ uses new self-tanning technology that creates an even, brown-looking tan without the old fashioned and complicated application of creams. The new Sun Spritz™ solution is non toxic.

There is no other comparative machine which can give your clients an instant tan in just seconds. This results in zero competitive edge on the industry in this country.

How long does it take?

The Sun Spritz™ unit takes only seconds due to the high-pressure atomizer valve spray systems, which means you are in and out in less than 12 seconds thus not having to breath in any of the active ingredient DHA. Other units can take up to well over 60 seconds.

How does it work?

You will discover that some other machines on the market use a pressurized cylinder to power the system, which can last up to 30 sessions. Having to change cylinders on competing machine results in more effort and ultimately more cost. The Sun Spritz™ system works on a brand new reservoir control system, quite simply place the feed tube into the lotion bucket and you will get well over 1000 sessions (depending on which reservoir is used) without the inconvenience of any servicing. With the automatic washdown system you can concentrate on servicing the clients and not the machine! (There is still a need to wipe down the inside of unit after each session)

OPERATING MANUAL

Sun Spritz™ Facts Continued

Do you have to turn around?

No, you do not have to turn around as the stationary spray jets cover the client. However, for best results the client must follow the simple movements explained on page 6 para, F 1 and 2.

Is it safe?

Injury in the Sun Spritz™ system is very unlikely because there are no moving parts and you do not need to turn around unlike most of the units on the market. Because you are only in the unit for a few seconds you will not lose your balance, unlike spending over a minute with closed eyes and posing in different positions can cause unbalance especially when there are moving parts to contend with.

How do you clean it?

The Sun Spritz system™ is made only from stainless steel, you will find other units on the market are made of plastic which can tarnish and stain very easily. The Sun Spritz™ system also has its very own automatic washdown system, which as you can imagine saves staffing costs and once again human error of cleaning the unit down after every session properly and hygienically. (There is still a need to wipe down the inside of unit after each session)

Will I get the spray residue all over the salon?

No, some other units on the market are not self contained, which of course would result in residue build up all over your salon.

Does anyone have to use barrier cream?

No, it is not necessary to use barrier cream. You will also find generally all other units use barrier cream to cover up finger nails, dry skin areas and any other absorbent areas due to excessive staining of the skin, this can take up to 5 minutes each session. And very importantly any excess cream will cause white patches. In our experience once the session has finished it is advised to lightly massage the body all over to penetrate the lotion further in to the skin and even out any residue. It is then recommended to wash the hands and feet to remove excess lotion eliminating the use of barrier cream.

How will the client dry off?

Extraction fans in the Misting Chamber will remove excess Misting Solution. Any unabsorbed lotion is lightly massaged into the skin by the client and a light towel dry completes the session.

OPERATING MANUAL

The Client Consultation

It is recommended that the first consultation takes at least 15 minutes. Every client must have an initial consultation to overcome any concerns, and to explain how to achieve the best results from their treatment.

The following must be fully explained:

- A. How the Sun Spritz™ booth works.**
- B. Ingredients of the Tanning Solution.**
- C. Preparation (refer client to leaflet).**
- D. What to do during the Treatment Cycle see page 6.**
- E. Post Tanning (refer client to leaflet).**
- F. Caring for your Tan (refer client to leaflet).**

Q. Should I hold my breath during the Sun Spritz™ tanning session?

A. We do recommend that you hold your breath during the misting process, which lasts on a few seconds. We say this only because most customers would rather not breath in the mist even though there is nothing in the solution that would cause you harm. If you have a history of asthma or other breathing difficulties we recommend that you tan in the Sun Spritz™ tanning booth only after consulting with your physician.

Q. Do I need to cover my hair during the tanning session?

A. We recommend wearing a disposable shower cap (provided by the salon) to prohibit the solution from getting in hair. The Sun Spritz™ solution will not harm hair, as it does not penetrate the hair follicle.

Q. Will the Sun Spritz™ solution leave an unpleasant smell on my skin?

A. We have noticed that customers notice a smell on their skin right after tanning but is not usually noticed by others around them.

Q. Will I be wet after my tanning session?

A. The application process consists of a very fine mist. After you step out of the booth, simply rub in excess solution and towel dry. Toweling off will not cause the solution to streak. It is recommended to wash hands thoroughly after your session.

Q. How can I enhance the tanning results from the Sun Spritz™?

A. We recommend exfoliating your body prior to your session. If you are not able to do the exfoliation process it is recommended that you apply an approved moisturizer prior to application to rough areas of your body such as knees or elbows. However after your session you should not apply any moisturizer or lotion to your body for the initial "set-up" time of 5 hours. As with any tanning process, an approved moisturizer will only enhance your tanning results.

Reasons why Our Sun Spritz Technology is the best!

- Our new Sun Spritz™ Booths will give you a rich golden tan in just seconds and it's 100% UV-Free, you will be misted with the highest quality self-tanning solutions. Our Sun Spritz™ solution delivers DHA, bronzers, nourishing moisturizers and Vitamins A, E and C to give your skin a smooth and healthy glow. You'll look and feel great in just seconds with this new Sun Spritz™ technology.
- Sun Spritz™ is especially ideal for hard-to-tan skin types. The UV-free process gives a beautiful tan that lasts 5 to 7 days. The first application will reproduce a light to medium brown tan. A rich darker color can be obtained simply by repeating the process until you achieve the results you desire.
- Tanning sessions should be spaced at least 24 hours apart.
- Sun Spritz™ uses new self-tanning technology that creates an even, brown-looking tan without the old fashioned and complicated application of creams. The solution is non toxic.



QUESTIONS AND ANSWERS



©Heartland Tanning, Inc.™

OPERATING MANUAL

The Client Consultation Check List

A. How does the Tanning Booth work?

For a few seconds the client is going to be misted by 9 nozzles. The mist will completely cover the body creating a natural reaction with the top layers of skin and producing a natural looking tan.

B. Ingredients of the tanning solution.

DHA, bronzers, nourishing moisturizers and Vitamins A, E and C.

C. Best Results Preparation (refer client to leaflet) see page 4.

- Prime your skin for treatment by exfoliating and moisturizing the previous night. (Moisturizing on the day will dilute your tan.)
- Do any waxing or shaving at least 24 hours before your appointment as this should reduce any skin irritation.
- Only wear comfortable clothes as the lotion may mark tight fitting garments.
- Wear dark or older underwear as the lotion will stain light Nylon and silk.
- Always tint eyelashes and eyebrows at least one full day before your appointment to avoid possible discoloration by the lotion.

D. Post Tanning Advice (refer client to leaflet).

- Please leave your Sun Spritz™ tan on for at least 6 hours and preferably overnight before showering or taking a bath. This gives your tan a chance to fully develop.
- Avoid sitting on light colored furniture until you have showered or taken a bath as the lotion can cause discoloration.
- Avoid strenuous exercise as sweating can inhibit the development of your tan.
- If when you shower, you see a brown color in the waste, this will only be surplus lotion being revealed.

E. Aftercare (refer client to leaflet).

- Moisturize regularly to help maintain the tan.
- Avoid long hot baths and showers as these speed up exfoliation.
- Pat your skin dry after a bath or shower as rubbing your skin may rub off your tan.
- Avoid swimming pools as the chlorine will bleach your tan.
- Exercise carefully to reduce sweating as this will cause your tan to fade unevenly.

WARNING:

*Clearly instruct and demonstrate to each client the movements which must be performed during the misting cycle. This is to ensure an even application of solution under the arms and onto the inner thighs. Failure to do this correctly will result in an uneven application which will result in a **DISSATISFIED CLIENT!!***

OPERATING MANUAL

The Treatment Cycle

What to do during the Treatment Cycle

- Operators must show the client the movements to be carried out in the Misting Chamber.
- For best results, wear no make-up, lotions or perfumes. Sun Spritz™ Technology works best on clean taut skin.
- Remove contact lenses, jewelry and clothing.
- Put hair in shower cap, position it just on the hair line.
- Press the start button on the FMA Timer.
- Enter the “Misting Chamber”, face the clear glass shower door with your feet, shoulder width apart.
 - **When Misting begins:**
 1. Raise your left knee to the waist and lift both arms up into an oblong “**○**” above your head.
 2. Raise your right knee to the waist and lift both arms up into an oblong “**○**” above your head.
 - Repeat steps 1 and 2 for up to one minute. **Failure to follow these movements will result in uneven application or streaking.**
- Once outside the unit, use your hands to spread the lotion to all the hard to reach areas such as the inside of the arms and legs and underneath your neck, breasts and buttocks.
- Remove and discard shower cap and towel dry off gently but thoroughly.
- Wipe the palm of your hands thoroughly with a moist towel, also wipe in between fingers and toes and around the bottom of the feet, heels and all of your finger nails and toe nails.
- After dressing, wash palm of hands with warm soapy water or exfoliate.

OPERATING MANUAL

Frequently Asked Questions

Q. How does Sun Spritz™ tan the skin with out the sun?

A. The active ingredient in the mist is DHA this causes a chemical reaction with in the skin to produce a natural looking tan, but without the damage of UV rays.

Q. Is this process safe?

A. It has been in use for over 30 years without any harmful effects reported and is Government approved. There maybe some people who have an allergic reaction to DHA, and may be caused some temporary discomfort. It is not dangerous.

Q. To maintain your tan how often would you need an appointment?

A. With no sun and post care, between 5-7 days (refer to step 3 of leaflet).

Q. How long does the “misting” process take?



A. Approximately six to eight seconds.

Q. Will it stain my clothes?

A. It will stain silk and light colored nylon. However, it will wash out of cotton but it is recommended that loose clothes are worn on the day of the treatment.

OPERATING MANUAL


Plan Of The Sun Spritz™ Booth and T-Max Control Panel

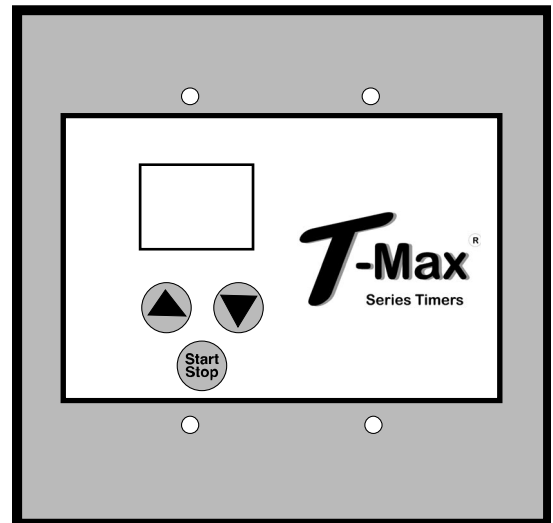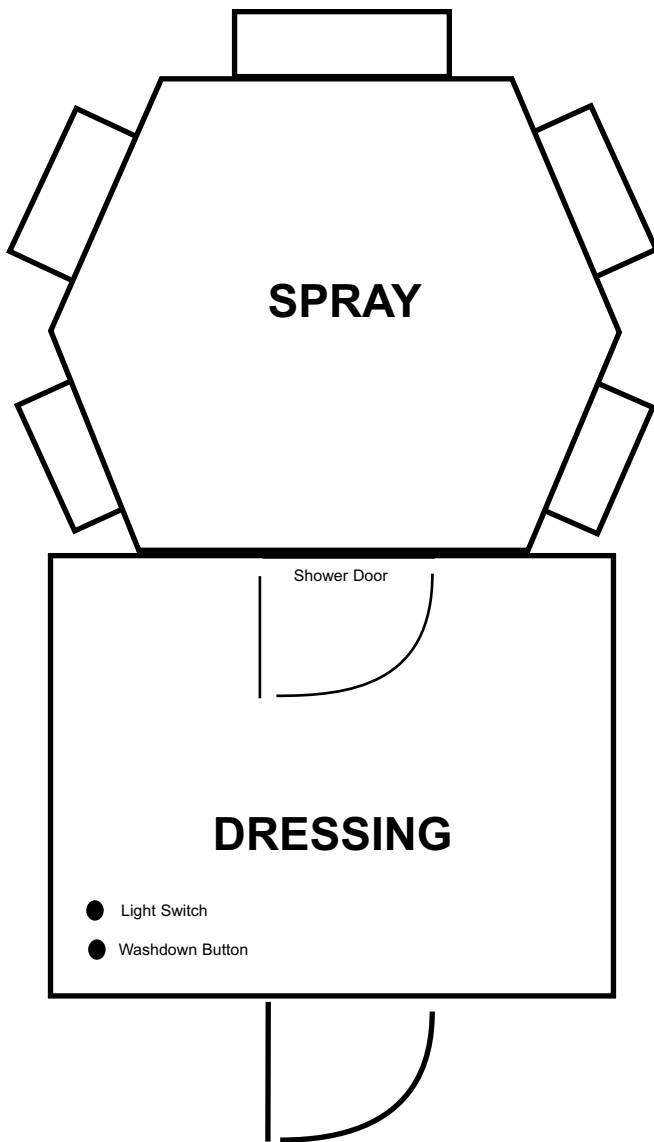

OPERATING MANUAL


Operation of the T-Max Timer Control in Manual Mode

Step 1 - Delay Time Set

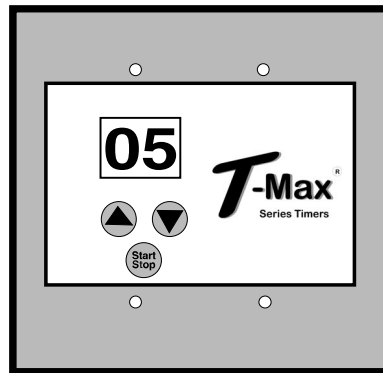

Press and hold LEFT button until delay time of 15 seconds is shown

Step 2 - Starting Misting Session

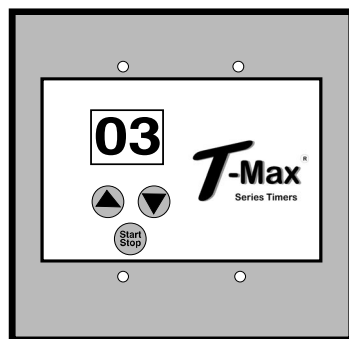

Press START button once. T-Max will count down from 15 seconds then misting will begin

Note: Full stop after time indicates Changing Time Countdown. After 3 minutes has elapsed, T-Max changes to Treatment Time.

OPERATING MANUAL

Sun Spritz™ Daily Checks

1. **Switch On** all supplies for Water and Electricity to the booth and compressor.
2. **Switch** the compressor on and drain off the tank using a plastic cup (the drain pet-cock is located on the bottom side of the air compressor tank). Place the cup under the “**DRAIN HERE**”, turn the thumb screw (located on the air pressure regulator on the back of the Sun Spritz™ unit) allowing air to discharge - continue until compressor starts to run then return the thumbscrew to the closed position (normally only a few drops of moisture are emitted).
3. Ensure that the booth has been washed down (using the **WASHDOWN** button) and that the floor areas in booth cubicles have been wiped dry.
4. **Open** the glass shower door and **Wipe down** both sides of the glass door.

WARNING:

Do not use a towel etc. to dry down the walls of the Misting Chamber as fluff may clog the spraying valves causing an incorrect application of tanning Solution.

5. Place a new, clean mat on the cubicle/changing area floor.
6. **Check** that brown tanning solution is visible in the tanning Solution Tubes located on the outside of the Sun Spritz booth (see Fig 1.).

WARNING:

If no solution is seen in the tubes make sure that the fill indicator light (located on the left side panel at eye level) is off. If the light is off unit can be operated. If light is on, unit is low on solution and pump reservoir should be turned on to fill top tank until indicator light shuts off. Turn pump off.

7. Ensure that there are sufficient: Shower Caps, Mats, Wet Wipes and Exfoliators (for cleaning the palms of the hands) available for the day.
8. Ensure that there are sufficient dry, clean towels available for the day.

Sun Spritz™ End of day recommendations:

1. Switch compressor OFF.
2. Shut water supply OFF.
3. Make sure that Solution Reservoir Pump is shut OFF.

OPERATING MANUAL

Emergency and First Aid Precautions

INHALATION:

Not expected to present a significant inhalation hazard under anticipated conditions of normal use.

EYE CONTACT:

Not expected to present a significant eye contact hazard under anticipated conditions of normal use. Flush eyes thoroughly with water if needed, and see physician.

SKIN CONTACT:

Not expected to present a significant skin hazard under anticipated conditions of normal use. Wash with soap and water if needed. Persons with allergic reaction should avoid using the product.

INGESTION:

No significant signs or symptoms indicative of any health hazard are expected to occur as a result of small amount of ingestion of the product. Do not induce vomiting. Rinse mouth with water. Consult physician if needed.

We recommend that you avoid wearing leather, silk, spandex, lycra or other fine fabrics immediately after application. Warning - This product does not contain a sunscreen and does not protect against sunburn.

Avoid spray going directly into eyes.

OPERATING MANUAL

Sun Spritz™ Installation

Salon Information, Requirements and Responsibilities

Included with the Sun Spritz™ system we provide component installation and training collateral for your salon. The salon is responsible for being prepared for the Sun Spritz™ system prior to its installation. The following are basic requirements and things that **MUST BE COMPLETED** prior to system installation arrival on-site:

- Dedicated room with minimum dimensions of 7' x 7' (84" x 84") with the ceiling a minimum of 8' high for unit only, empty and accessible
- Electrical service (120 VAC outlet) 20 Amp Service with 4Plex Outlet or Duplex Outlet with Outlet Strip operational and properly located
- For a unit with a changing room allow a minimum of 7' x 12' (84" x 144") of space with an 8' ceiling
- Fresh water with shut off (cold) and drainage piping installed in the room and ready for use
- Planned location of air compressor (dedicated 120 VAC, 20 AMP outlet required)
- Remote timer location (without changing room)
- Step ladder (6 foot) available for installers use
- Timer network wires or wall jack in room
- Shop Vac
- Salon access from 7:00 am until normal salon closing hour
- System shipment, unloading and storage
- Time dedicated for proper system training of salon manager and employees

Dedicated Room

The Sun Spritz™ system should have a dedicated room for its use only. The room must be at a minimum of 7' x 7' (84" x 84"); slightly larger is always better. The room floor must be level and free of obstructions. Preferred floor cover type is tile or linoleum, carpeted floors are not recommended. Overhead lighting is also required, the system is not provided with lights.

Electrical Service

The Sun Spritz™ unit requires a 120 VAC -20 Amp electrical service for operation. A standard 4Plex electrical outlet is sufficient for proper operation or a standard Duplex Outlet with Outlet Strip. Under no circumstances will installers be responsible for electrical service installation.

Fresh Water – Drain

A fresh water supply is required for booth sanitizing and wash-down after each tanning session. Cold-water service is required with a minimum of 40 pounds of pressure capable of 8 gpm. Water service needs to be quipped with an on/off valve located in the room with easy access. We recommend that water service to the Sun Spritz™ system be turned off each night. Although the system is fully self-contained, a drainpipe is required to remove wash-down water from the booth. The Sun Spritz™ system is equipped with a fully automatic discharge pump for the removal of wash-down water. The discharge pump provided is capable of overcoming 70 ft. of head pressure or approximately 30 PSI. A minimum drainpipe inside diameter of 3/8" is required. Drainage should be directed to the sewer system. In no way what so ever is Sun Spritz™ responsible for the integrity of the hoses or piping installed for fresh water and drain service. Under no circumstances will installers be responsible for fresh water or drainpipe installation. The unit utilizes 3/8 OD High Pressure Plastic Hose from the unit attaching to supply by a Quick-Connect fitting. The final connection will require the Quick-Connect fitting with 1/4" MIP. being threaded into the customer supplied 1/4" FIP. fitting with a shut off valve.

Note: In an existing salon a normal clothes washer cold water supply and drain can be accessed. The plastic 3/8" lines will need to be pre-run before delivery. (1-for cold water supply and 1 for wash down water drain.)



OPERATING MANUAL

Sunspritz™ Installation Cont.

Air Compressor Location and Hose Installation

The Sun Spritz™ system requires compressed air for proper operation; a compressor is included with the system. The air compressor will make some noise and should NOT BE located in the tanning room. The air compressor is 32" wide x 24" deep x 48" tall and will require an appropriate sized location. The unit does require periodic maintenance and should be located with easy access. The air compressor requires a 120 VAC, 20 amp, dedicated electrical service. A 6' power cord is provided with the air compressor. The use of any type of extension cord is prohibited and will void the air compressor warranty. Compressed air service will need to be installed in the Sunspritz™ room. Piping or hose outside diameter (OD) should be no less than 3/8" for lengths up to 100". Under no circumstances will installers be responsible for electrical service or air supply installation. The 3/8 OD plastic air line should be routed from compressor location to room prior to delivery and installation of the unit.

Remote Controller

The Sun Spritz™ system is provided with a remote T-Max Timer. This timer will enable you to operate the unit anywhere within the Sun Spritz™ room. The system is capable of operating with an existing T-Max Timer controller. Under no circumstances will installers be responsible for communication cable installation or timer integrating into an existing T-Max controller system. Note: If a changing room is used remote timer is mounted inside Sun Spritz™ changing room.

Stepladder

A 6' stepladder in good and safe condition is required for the installers use.

Shop Vac



A working shop vac is required for the installers use.


Salon Access



The Sun Spritz™ systems are typically installed and salon personal trained in a single day. It is important that the unit arrives prior to the day of installation and that the installer has full and complete access to the salon. Because there is much to be accomplished in a single day, installation may need to start prior to the typical salon hours of operation. The installer and salon operator can determine actual hours for installation.

System Shipment, Unloading and Storage

Please have the appropriate personnel available for unloading. **DO NOT DEPEND ON THE TRUCK DRIVER OR DELIVERY PERSON TO UNLOAD OR ASSIST WITH UNLOADING THE BOXES.** Installers request that all boxes remain unopened and near or in the dedicated Sun Spritz™ room prior to installer's arrival. The Sun Spritz™ system is shipped in two large crates. The shipping crates are large and are quite heavy, more than one person will be required to unload and store the system prior to installers arrival. Boxes can be removed individually if a forklift or a pallet jack and loading dock are available. If neither are available the crates will need to be opened and unit unloaded by individual pieces. In the event that boxes are opened prior to the installers arrival, Sun Spritz™ will not be responsible for damaged or missing parts. Note any apparent damage on the Bill of Lading prior to signing and accepting the shipment. Actual delivery dates and times may vary and are the responsibility of Sun Spritz™. We will provide appropriate shipping information allowing you to track the shipment and estimated arrival date.

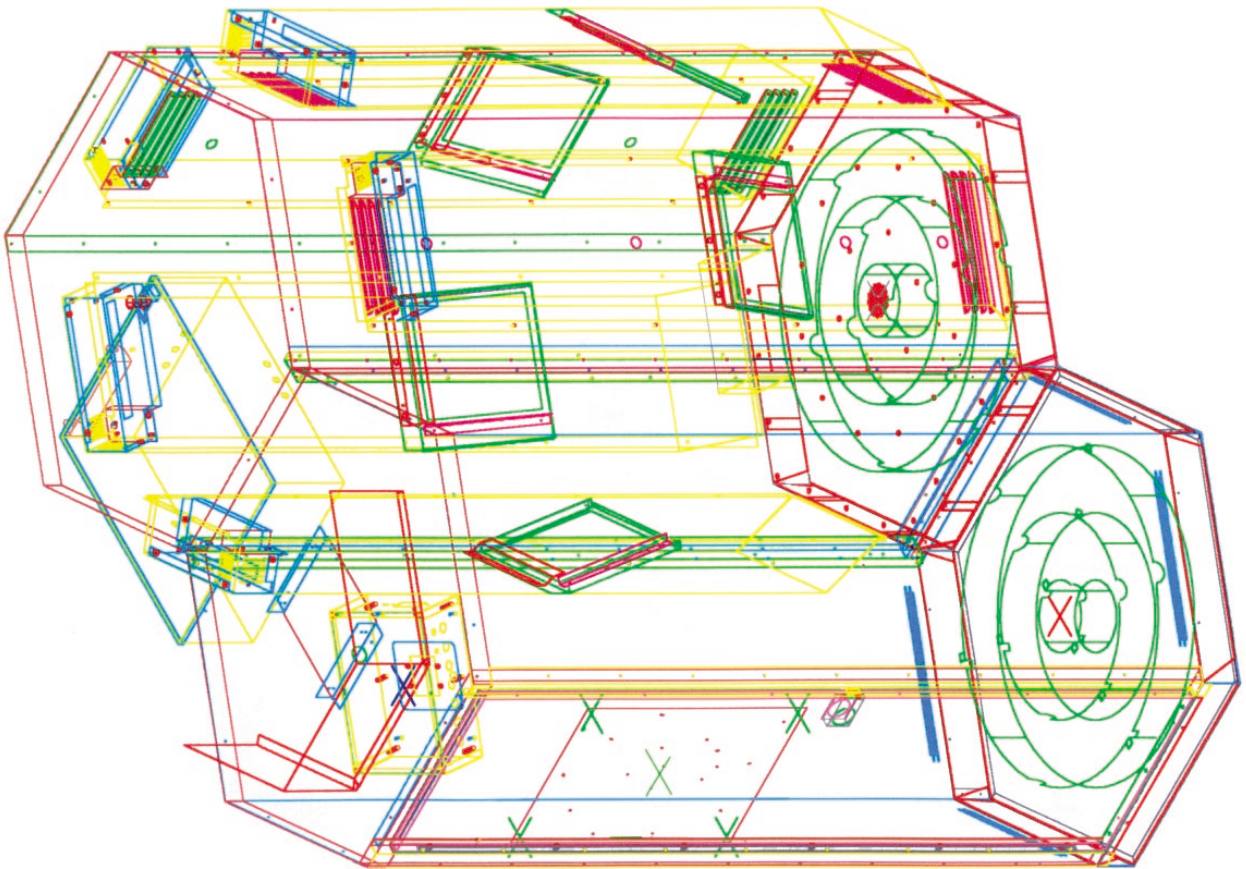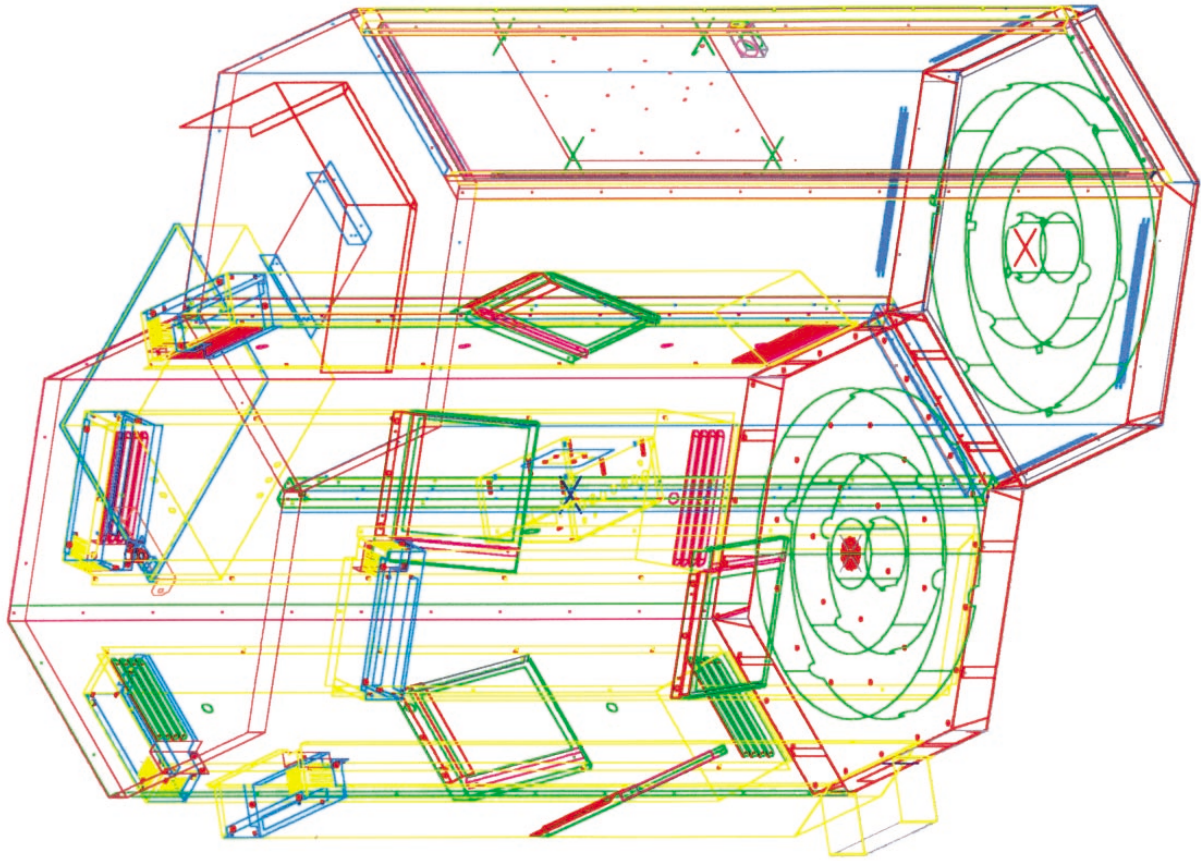

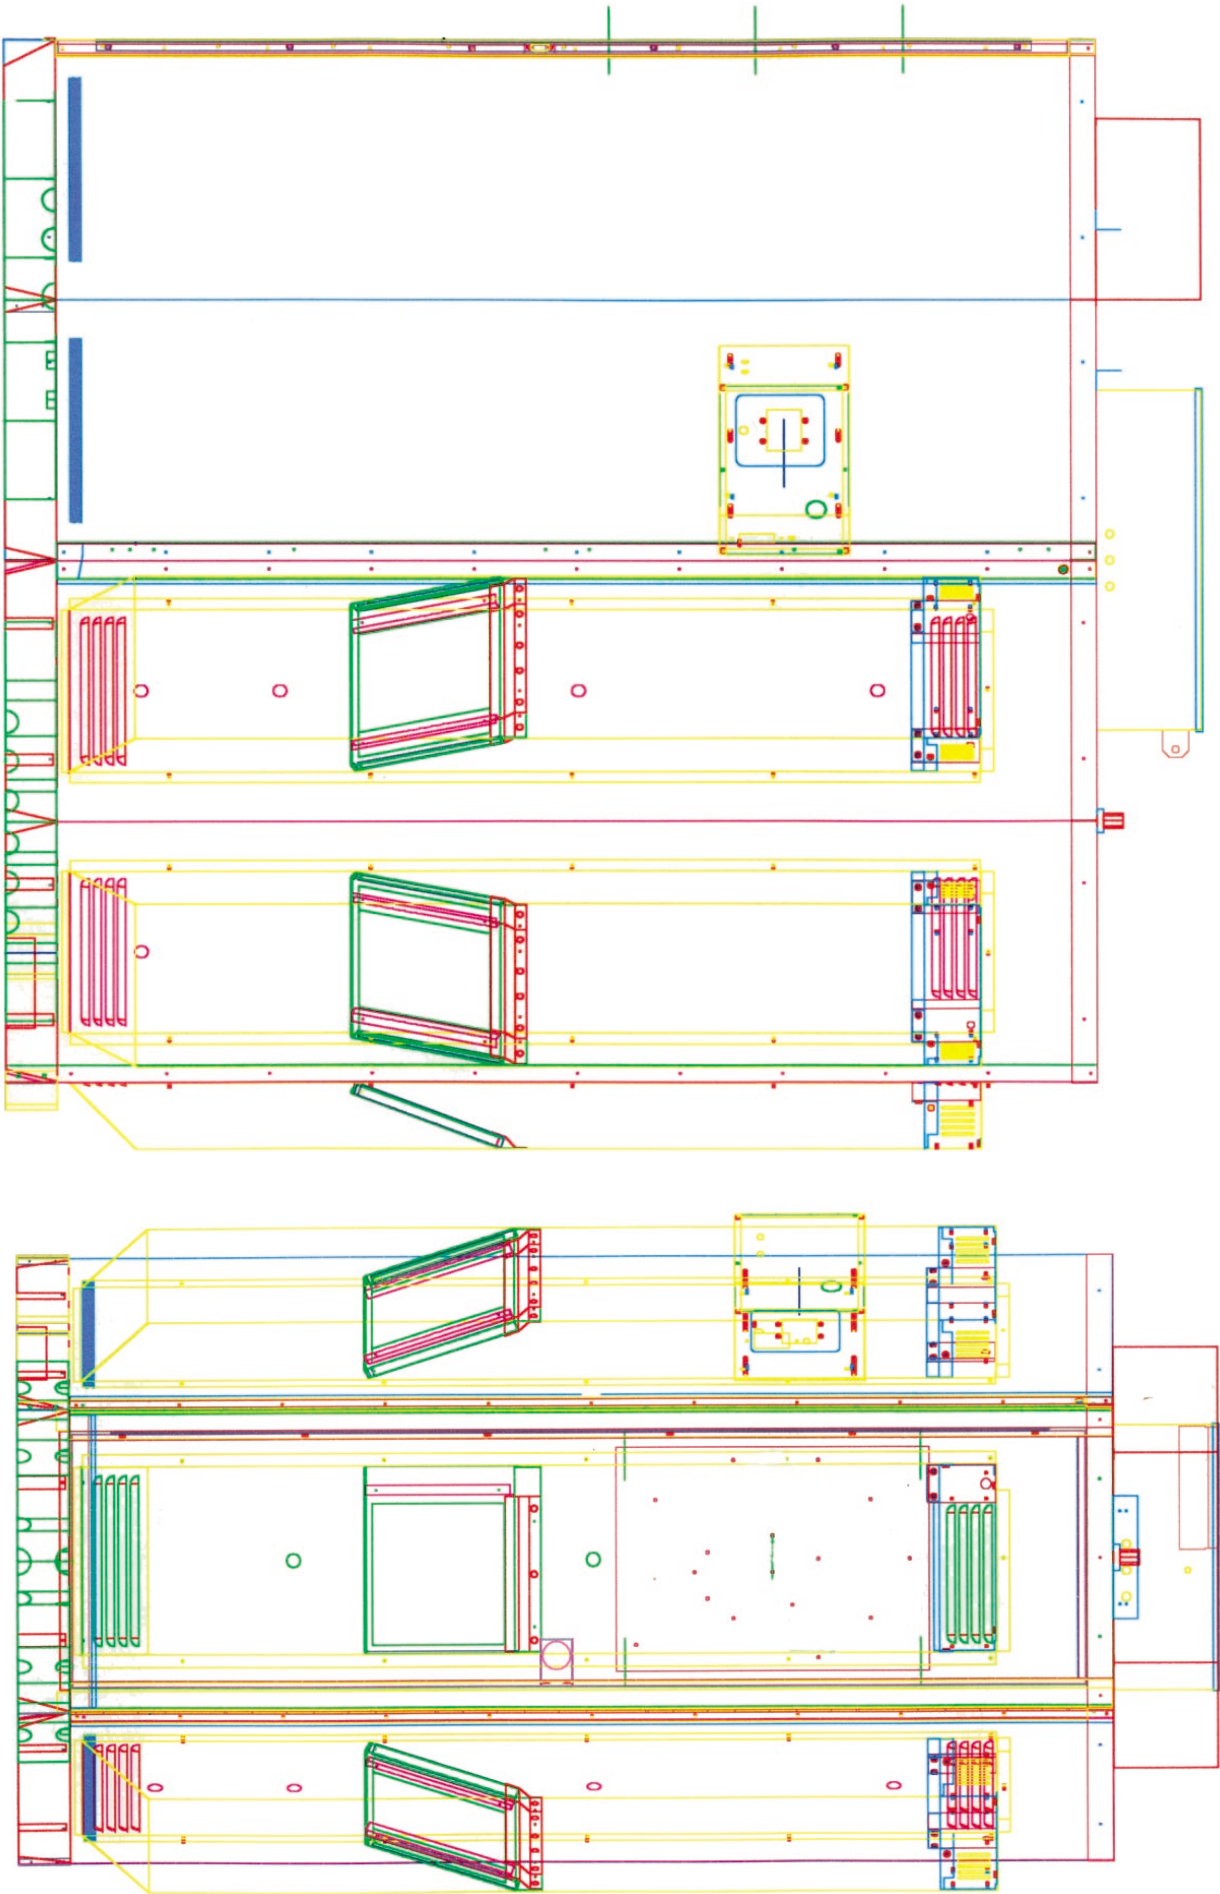

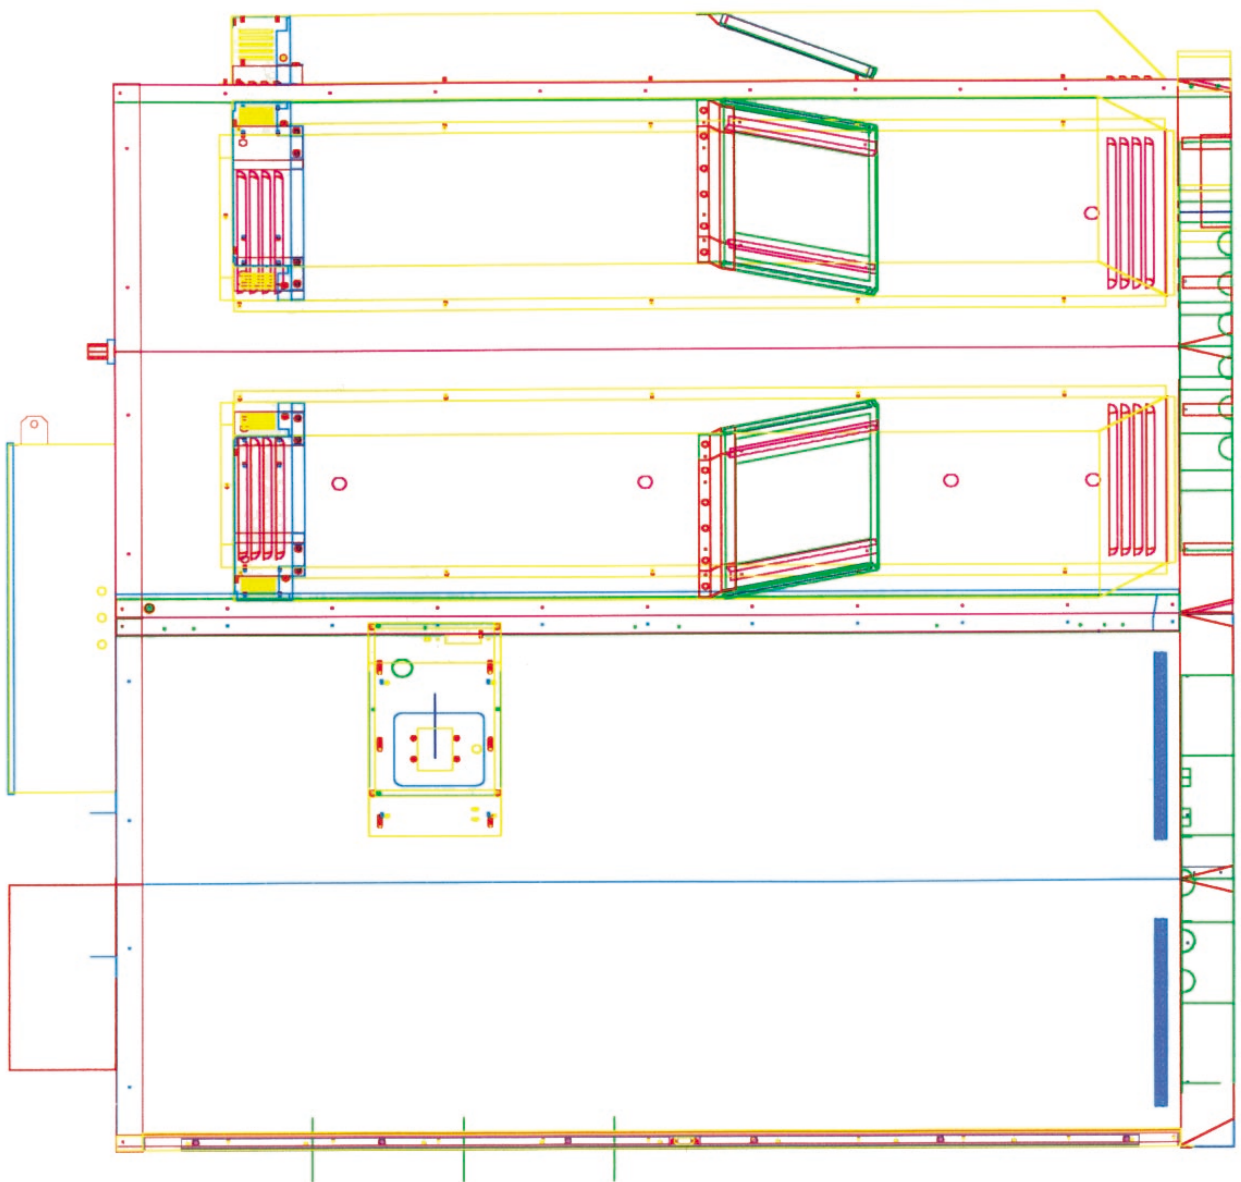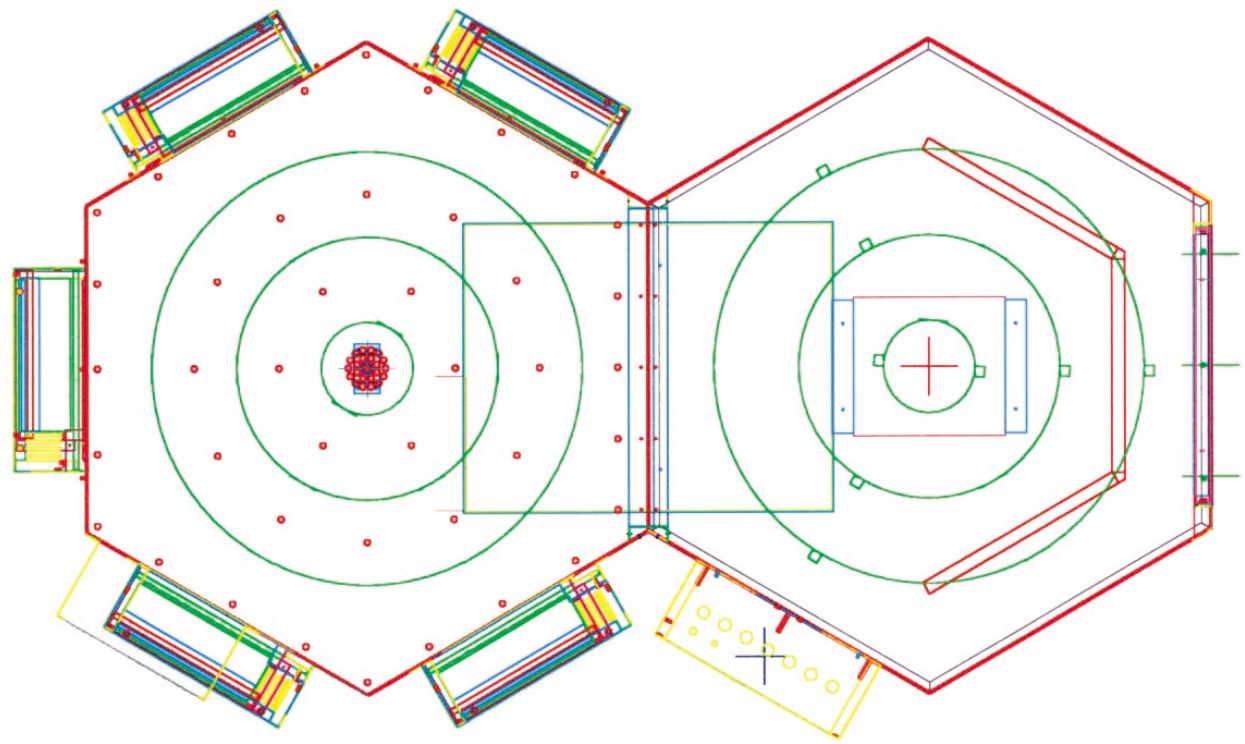



800-554-8268
www.heartlandtan.com

Exceeding Your Expectations!